



IO Zone 560 BAS Point List

Display Name	Network Visible	Read/Write	Units	Default Value	Reference Name	Object Type	Object ID	BACnet Property	Control Program
Discharge Temp	TRUE	R	°F		da_temp	AI	0	Present Value	wshp_w_datccsfcsfaultalr_rev20210525.equipment
Zone Temp	TRUE	R	°F		zone_temp	AI	0	Present Value	wshp_w_datccsfcsfaultalr_rev20210525.equipment
Cool Request	TRUE	R	no units		cool_request	AV	0	Present Value	wshp_w_datccsfcsfaultalr_rev20210525.equipment
Enabled Stages	TRUE	R	no units		enabled_cmpstages	AV	0	Present Value	wshp_w_datccsfcsfaultalr_rev20210525.equipment
Heat Request	TRUE	R	no units		heat_request	AV	0	Present Value	wshp_w_datccsfcsfaultalr_rev20210525.equipment
Run Request	TRUE	R	no units		sys_run_req	AV	0	Present Value	wshp_w_datccsfcsfaultalr_rev20210525.equipment
Setpoint	TRUE	R/W	°F			AV	0	Present Value	wshp_w_datccsfcsfaultalr_rev20210525.equipment
Setpoint	TRUE	R/W	°F			AV	0	Present Value	wshp_w_datccsfcsfaultalr_rev20210525.equipment
Setpoint	TRUE	R/W	°F			AV	0	Present Value	wshp_w_datccsfcsfaultalr_rev20210525.equipment
Setpoint	TRUE	R/W	°F			AV	0	Present Value	wshp_w_datccsfcsfaultalr_rev20210525.equipment
Setpoint	TRUE	R/W	°F			AV	0	Present Value	wshp_w_datccsfcsfaultalr_rev20210525.equipment
Setpoint	TRUE	R/W	°F			AV	0	Present Value	wshp_w_datccsfcsfaultalr_rev20210525.equipment
Setpoint	TRUE	R/W	°F			AV	0	Present Value	wshp_w_datccsfcsfaultalr_rev20210525.equipment
Setpoint	TRUE	R/W	°F			AV	0	Present Value	wshp_w_datccsfcsfaultalr_rev20210525.equipment
Comp Status	TRUE	R			comp_status	BI	0	Present Value	wshp_w_datccsfcsfaultalr_rev20210525.equipment
BV Allow Continous Operation	TRUE	R/W		Active (1)	allow_continous	BV	0	Present Value	wshp_w_datccsfcsfaultalr_rev20210525.equipment
BV Unit Enable (BAS)	TRUE	R/W		Active (1)	enable_bas	BV	1	Present Value	wshp_w_datccsfcsfaultalr_rev20210525.equipment
COMP_FAIL	TRUE	R			comp_fail	BV	0	Present Value	wshp_w_datccsfcsfaultalr_rev20210525.equipment
COMP_HAND	TRUE	R			comp_hand	BV	0	Present Value	wshp_w_datccsfcsfaultalr_rev20210525.equipment
COMP_RNTM	TRUE	R			comp_rntm	BV	0	Present Value	wshp_w_datccsfcsfaultalr_rev20210525.equipment
Compressor Demand	TRUE	R			demand_compressor	BV	0	Present Value	wshp_w_datccsfcsfaultalr_rev20210525.equipment
COMPRESSOR_FAIL	TRUE	R			compressor_fail	BV	0	Present Value	wshp_w_datccsfcsfaultalr_rev20210525.equipment
DAT_HI	TRUE	R			dat_hi	BV	0	Present Value	wshp_w_datccsfcsfaultalr_rev20210525.equipment
DAT_LO	TRUE	R			dat_lo	BV	0	Present Value	wshp_w_datccsfcsfaultalr_rev20210525.equipment
Fan Demand	TRUE	R			dmd_fan	BV	0	Present Value	wshp_w_datccsfcsfaultalr_rev20210525.equipment
FAN_FAIL	TRUE	R			fan_fail	BV	0	Present Value	wshp_w_datccsfcsfaultalr_rev20210525.equipment
FAN_HAND	TRUE	R			fan_hand	BV	0	Present Value	wshp_w_datccsfcsfaultalr_rev20210525.equipment
FAN_RNTM	TRUE	R			fan_rntm	BV	0	Present Value	wshp_w_datccsfcsfaultalr_rev20210525.equipment
Occupancy	TRUE	R			occ_status	BV	2	Present Value	wshp_w_datccsfcsfaultalr_rev20210525.equipment
Override Off	TRUE	R			ovrd_off	BV	0	Present Value	wshp_w_datccsfcsfaultalr_rev20210525.equipment
Override On	TRUE	R			ovrd	BV	0	Present Value	wshp_w_datccsfcsfaultalr_rev20210525.equipment
Reversing Valve Demand	TRUE	R			demand_reversing_valve	BV	0	Present Value	wshp_w_datccsfcsfaultalr_rev20210525.equipment
Run	TRUE	R			run	BV	0	Present Value	wshp_w_datccsfcsfaultalr_rev20210525.equipment
ZS_COMM	TRUE	R			zs_comm	BV	0	Present Value	wshp_w_datccsfcsfaultalr_rev20210525.equipment
ZST_FAIL	TRUE	R			zst_fail	BV	0	Present Value	wshp_w_datccsfcsfaultalr_rev20210525.equipment
ZTMP_HI	TRUE	R			ztmp_hi	BV	0	Present Value	wshp_w_datccsfcsfaultalr_rev20210525.equipment
ZTMP_LO	TRUE	R			ztmp_lo	BV	0	Present Value	wshp_w_datccsfcsfaultalr_rev20210525.equipment
Mode	TRUE	R			mode	MSV	0	Present Value	wshp_w_datccsfcsfaultalr_rev20210525.equipment
Unit Control Source	TRUE	R/W		2	unit_ctrl	MSV	0	Present Value	wshp_w_datccsfcsfaultalr_rev20210525.equipment